


EXPANSION BOARD A4988/DRV8825

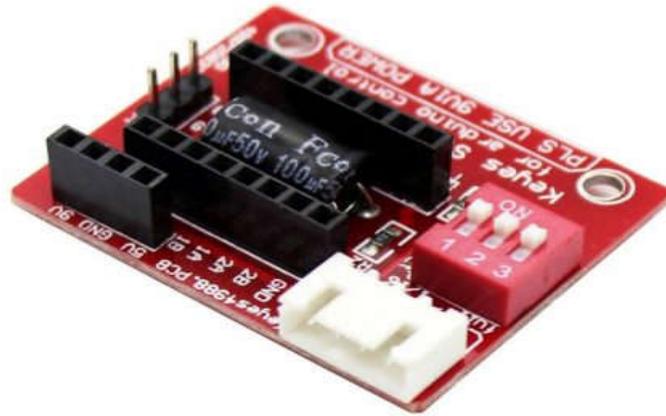

- **DESCRIPTION**
A4988/DRV8825 Stepper Motor Control Extension Board

With this A4988/DRV8825 Stepper Motor Control Extension Board, you can easily control the stepper motors via just 2 digital I/O's. Easy connection of cables via screw-less PC Terminals. Built-in DIP switch for adjusting driving modes and to obtain different rotational speeds.

Features

- If jumper is hit the position of ON DP, that means 16 segment (4988) or 32 segment (8825) Jm connected motor
- Jv connect 5v and 12v-24v power supply
- Jc E, S, D, G, respectively corresponding to the connection of the Enable/Step/Dir/Gnd drive signal output
- Can use A4988 / DRV8825, pay attention to the direction when inserting, otherwise it may burn drive.
- Jumpers hit the ON DP position indicate 16 segments (4988) or 32 segments (8825).
- Jm is connected to the motor.

Specifications

- Compatible with : DRV8825, A4988, TMC2208, LV8927, TBS109, TMC2100
- Switch for micro stepping configuration
- power supply pins : +5V / +12V /+24V
- Control pins: Enable, Direction, Step
- Compatible with Arduino, Raspberry Pi, Ra

